

TR Říčov - rek.R110kV, sek.tech., VS, PZTS
Rozpis sestav pro KZL a ZL
V5525/516

číslo stožáru	typ stožáru	ZL5_TR	KZL5_TR	KZL5_SK	KZL5_N	KZL5_K
TR V516	TR	0	1	0	0	0
TR V5525	TR	1	0	0	0	0
1	RV+4	0	0	0	0	1
2	Ns+0	0	0	0	1	0
3	Ns+4	0	0	0	1	0
4	RV+8	0	0	1	0	0
Celkem		1	1	1	2	1